

# NIC-500

## UPGRADE PROCEDURE

## SENSORS & SOFTWARE

from RADIODETECTION



These instructions describe how to update the software on the NIC-500 used with Sensors & Software GPR systems. Please note that this procedure will erase all GPR data from the system, so export any valuable data before continuing.

### STEPS TO FOLLOW ON YOUR PC

#### 1 Download

the zip file provided by Sensors & Software into a folder on your PC.

#### 2 Insert

a clean USB stick into your PC.

#### 3 Unzip


the file by double clicking the file in Windows Explorer.

#### 4 Copy

the unzipped folder to the root of the USB key. The resulting folder structure on the USB key should be:

```
dvl-apps
  auto
    PACKAGE_NAME.en
    PACKAGE_NAME.pkg
```

where PACKAGE\_NAME is the name of the item to be installed.  
An example of this is shown below:

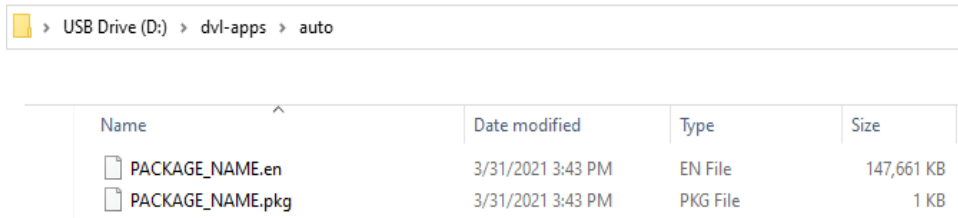

### STEPS TO FOLLOW ON NIC-500

#### 5 Turn off

the NIC-500. Remove the USB stick from your PC and insert it into the USB port of the NIC-500.



#### 6 Turn On

the NIC-500 by pressing the Power Button. The installation will start automatically. Some instructions may appear on the LCD asking you to press acknowledge and press the power button momentarily to continue. Do not hold the power button. When the installation is complete the NIC-500 will shut down and remain off.

#### 7 Remove

the USB stick after the package has been installed and after the unit automatically shuts down.

#### 8 Turn On

the NIC-500 and navigate to the application's System Info page to verify the newly installed version number.

### Sensors & Software Inc.

1040 Stacey Court  
Mississauga, ON  
Canada L4W 2X8

+1 905 624 8909

+1 800 267 6013

[Sensoft\\_Sales@spx.com](mailto:Sensoft_Sales@spx.com)

[www.sensoft.ca](http://www.sensoft.ca)